

AUDI S3/RS3 REAR AEROBLADE INSTALL


STEP 1: Preparation (optional)

We recommend painting or wrapping the aeroblades and mounting supports prior to install.



STEP 2: Assemble Supports

Using the supplied M5 bolts mount the supports to the aeroblades, Note that the LH is for the left hand side and RH is for the right hand side of the vehicle.

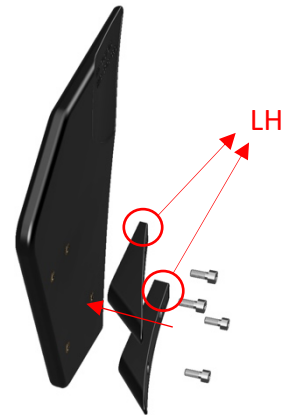

STEP 3: Apply Tape

Apply the supplied double-sided tape to the aeroblade supports as shown.



STEP 4: Mount to Vehicle

Before installing the aeroblades to the vehicle make sure the surface is thoroughly cleaned with car washing liquid followed by cleaning alcohol for the strongest bond. Prior to fitting mark the location with masking tape to ensure best fitment.

Remove tape backing and fit to vehicle applying pressure.

