


AUDI WING INSTALL


STEP 1: Fit the endplates

We recommend painting or wrapping the endplates and mounting feet prior to install (optional). Once complete install the endplates using the supplied gloss black M6 bolts.

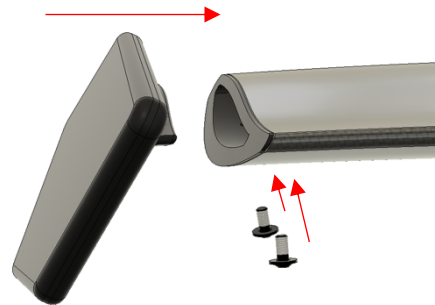

STEP 2: Fit the wing feet

Assemble the feet and loosely mount them to the wing using the M8 bolt.

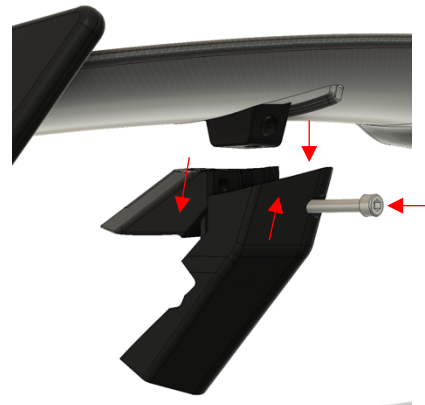


STEP 3: Align and mark to vehicle

With the wing fully assembled place it on the vehicle and align it to be centered. Then mark the position of the feet using masking tape on the vehicle.



STEP 4: Remove the wing feet


Now remove the wing from the vehicle and remove the wing feet from the wing.

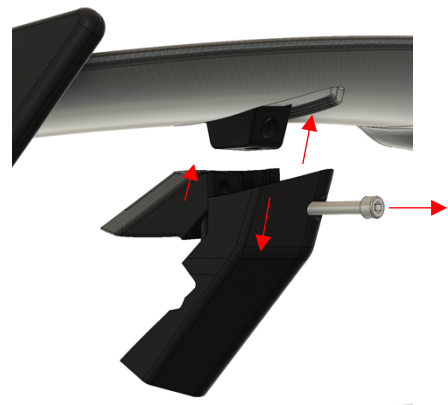

STEP 5: Apply tape to feet

Apply tape to the insides of the wing feet as shown. Ensure to install the tape inside of the raised edges on the side, this is to ensure the tape is hidden when installed.

Also clip on the small covers supplied to the front wing mounting feet.

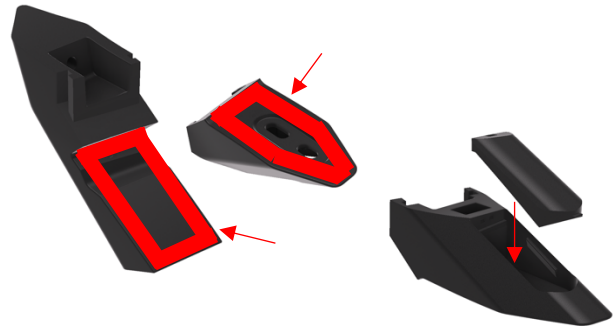

Optional – bolting to vehicle

The wing feet can be mechanically fixed to the existing spoiler. Remove the feet cover and mark 2 holes per side to drill into the existing vehicle spoiler. Use M6 or M8 rivnuts and fit these into the pre-drilled holes on the car's existing spoiler. These can now be used to bolt the feet to the car after step 6.




STEP 6: Fit the wing feet

Clean the surface of the car's spoiler where the wing will be fitted thoroughly with cleaning product and finally cleaning alcohol to ensure a strong bond.

6A: Remove the tape backing and fit the rear part of the wing mounting feet to the vehicle coming from the rear of the car.

6B: Remove the tape backing and slide the front part of the wing feet onto the rear part and onto the car's spoiler. Apply pressure for 2 minutes to ensure a secure bond.

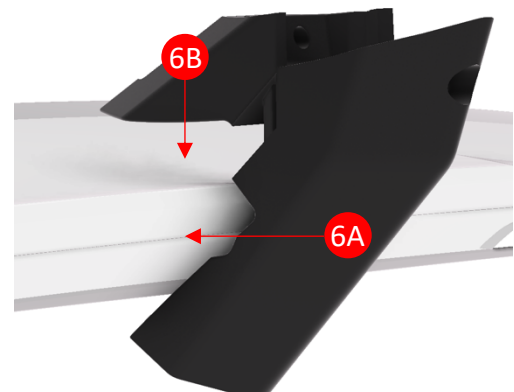

STEP 7: Fit the wing

Now that the feet are installed onto the car place the wing onto the mounting feet and secure them with the M8 silver bolts. Finally cover the bolts with the small caps supplied, these are marked with LH and RH, ensure to fit these the correct way around.

