

Audi A1 GB (2019-) Front Canard Install

STEP 1: Prepare Canards (optional)

Optionally before installing the canards, we recommend painting them as they come in a raw condition. Use a plastic primer followed by your choice of paint and finish off with a clear coat.



STEP 2: Prep Tools

For the install we recommend having the following at hand:

- Sharp cutting knife
- Cleaning cloth
- Cleaning product
- Cleaning alcohol
- Masking tape
- Kitchen Towel



STEP 3: Clean Surface

Prior to the install wash the surface using any generic product. Following this use a piece of kitchen towel and cleaning alcohol to deep clean the surface before applying the canards, this will ensure a more secure bond between the canards and the car




STEP 4: Apply Tape

Now apply the 3M tape supplied in the box to the canards as shown, cut away any tape at the ends of the canards. You will notice that the area where tape is to be applied has a slightly rougher and less even surface for the purpose of bonding better.



STEP 5: Align and Test Fit

Before fitting the canards test fit them with the tape on to spot and gaps or pressure points (shown in red) and where needed remove double sided tape. Also use masking tape to remember exactly where to place the canards.

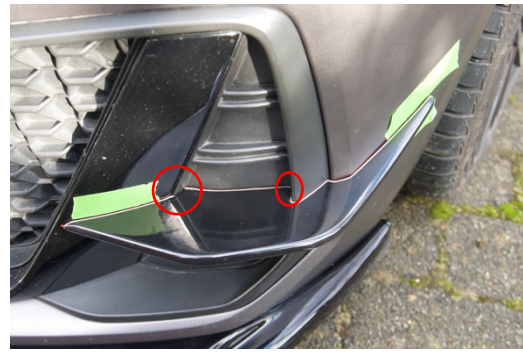

STEP 6: Apply Canards

Now that the canards are ready to fit remove the tape backing and place them on the car, make sure to apply a lot of pressure when doing so. Keep applying force for 5 minutes to guarantee the best bond. Repeat steps 4-6 for all canards.



INSTALL COMPLETE